

Touch-Up Kit Instructions

New Look Refinishing covers most simple repairs for the first two years after your surface has been refinished by us. Simply give us a call and we will schedule a time to return to your home and repair the chip.


This repair kit is included to save you the need to wait for New Look Refinishing to repair your small chip.



Most chips are relatively small - the size of a dime or pencil eraser. If your chip is larger than that, you may want to call New Look Refinishing to repair it for you.




Using a bottle cap or something disposable, mix together equal amounts of Catalyst and Resin. (Make sure they are completely mixed!)

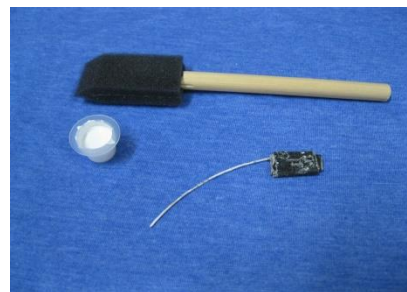

Insert the included brush into the mixed coating, and draw out enough to leave a wet drop on the corner of the brush.



Make sure the chipped area is clean and dry. Gently dab (do NOT brush) the coating into the center of the chip. Allow to dry for 5 minutes. Repeat if necessary to build to similar thickness.

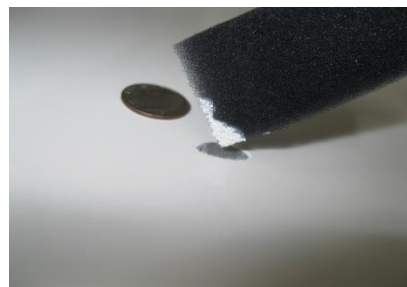

Lastly, allow to dry for a few hours before using!